



USER OPERATION MANUAL

ECLIPSE 8

(S.W. 1.87)

ECLIPSE 32

(S.W. 1.87)

ALARM CONTROL PANELS

Attention:

This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.

The information in this manual is a subject to change without notice!

Table of Contents:

1. GENERAL INFORMATION	5
2. SUPPORTED KEYBOARDS	6
2.1 LED Keyboards	6
2.2 LCD Keyboards	6
2.3 Buttons Functionality	7
2.4 Indication	8
2.5 Sound Signalization	9
2.6 Directions for Operation with LED Keyboards	9
2.6.1 Special indication used in LED 8 keyboard	9
2.6.2 Programming by Manager	10
2.6.3 Programming by User	10
2.7 Directions for Operation with LCD Keyboards	10
2.8 Entering Text with LCD Keyboards	10
3. OPERATION INSTRUCTIONS	11
3.1 Arming With a Keyboard	11
3.1.1 Full Arming Mode	11
3.1.2 Stay Arming Mode	11
3.1.3 Sleep Arming Mode	11
3.1.4 Arming All Available Areas in the System	12
3.1.5 Viewing the Status of the Areas	12
3.1.6 Reviewing the Open Zones	13
3.1.7 Changing the Arming Mode without Disarming	14
3.2 Arming Via a Card Reader	14
3.2.1 Arming via Built-in Proxy Reader in Keyboard	14
3.2.2 Arming via Stand-alone Proxy Reader	15
3.3 Disarming	15
3.3.1 Disarming via keyboard	15
3.3.2 Disarming via built-in card reader in a keyboard	15
3.3.3 Disarming via stand-alone proxy reader	16
3.4 Stopping the Sounders	16
3.5 Panic Buttons	16
3.6 Ambush Code	16
3.7 Technical Troubles Review	16
3.8 Checking the Bypassed Zones	17
4. USERS' PROGRAMMING MENUS	18
4.1 Changing own code	18
4.2 Memory LOG review by User	19
4.3 Turning on the Chime signalization by User	19
4.4 Zone bypassing by User	20
5. MANAGERS' PROGRAMMING MENUS	22
5.1 Creating and Changing User codes	23
5.2 Deleting User codes	23
5.3 Memory LOG review by Manager	23
5.4 Turning on the Chime signalization by Manager	24
5.5 Zones bypassing by Manager	24
5.6 Engineer Access	24

5.7 Assigning User attributes	25
5.8 Associating Area numbers to User	26
5.9 Entering of User names	27
5.10 Associating Timeslots to User	28
5.11 Assigning Attributes for user proxy card	29
5.11 Registering a User card	30
5.12 Deleting a User card	31
5.13 Cloning Users	32
5.14 Setting the Time	33
5.15 Setting the Date	33
5.16 Blocking Remote Access Via UDL	34
5.17 Assigning Rights for Remote Access	35
5.18 Sending a “Manual test” Message	36
5.19 Setting the Sound Level	36
5.20 Setting the intensity of illumination of the buttons	37
5.21 Scroll speed of messages in LCD keyboards	37
5.22 Turning off the backlight of buttons in keyboard LCD32 Sensitive	38
APPENDIX A - Table for Memory LOG Events	38
APPENDIX B – Special Symbols for Text Entering	41
APPENDIX C – VD/ DTMF Operation Algorithm	42
System Check List	43

USER MAINTENANCE NOTES

To provide long-lasting and reliable work of your security system we recommend the users to follow a few simple rules for maintenance:

1. Remove the protective transparent sticker from the LED or LCD display before starting daily operations with the keyboard.
2. Always close the protective cover when the keyboard is not used. That will protect the buttons from dust and dirt penetrating.
3. Weekly clean from dust the keyboards using a soft cloth. You can use also moist cleaning cloths for plastic surfaces.
4. Do not use any abrasive detergents that can scratch the surface.
5. Do not sprinkle or pour water and other liquids on the keyboard.
6. Always use only alcohol free cleaning detergents for cleaning the LCD display.
7. Before cleaning the LCD 32 Sensitive surface you can lock the sensitive buttons for 30 seconds with pressing at the same time the PRG button + right arrow button.

GUARANTEE

The guarantee terms are determined by the serial number (barcode) of the electronic device!

During the guarantee period the manufacturer shall, at its sole discretion, replace or repair any defective product when it is returned to the factory. All parts replaced and/or repaired shall be covered for the remainder of the original guarantee, or 6 months, whichever period is longer. The original purchaser shall immediately send manufacturer a written notice of the defective parts or workmanship.

INTERNATIONAL GUARANTEE

Foreign customers shall possess the same guarantee rights as those any customer in Bulgaria, except that manufacturer shall not be liable for any related customs duties, taxes or VAT, which may be payable.

GUARANTEE PROCEDURE

The guarantee will be granted when the appliance in question is returned. The guarantee period and the period for repair are determined in advance. The manufacturer shall not accept any product, of which no prior notice has been received via the RAN form at: <http://www.teletek-electronics.com/en/support/Service>

The setup and programming included in the technical documentation shall not be regarded as defects. Teletek Electronics bears no responsibility for the loss of programming information in the device being serviced.

CONDITIONS FOR WAIVING THE GUARANTEE

This guarantee shall apply to defects in products resulting only from improper materials or workmanship, related to its normal use. It shall not cover:

- Devices with destroyed serial number (barcode);
- Damages resulting from improper transportation and handling;
- Damages caused by natural calamities, such as fire, floods, storms, earthquakes or lightning;
- Damages caused by incorrect voltage, accidental breakage or water; beyond the control of the manufacturer;
- Damages caused by unauthorized system incorporation, changes, modifications or surrounding objects;
- Damages caused by peripheral appliances unless such peripheral appliances have been supplied by the manufacturer;
- Defects caused by inappropriate surrounding of installed products;
- Damages caused by failure to use the product for its normal purpose;
- Damages caused by improper maintenance;
- Damages resulting from any other cause, bad maintenance or product misuse.

In the case of a reasonable number of unsuccessful attempts to repair the product, covered by this guarantee, the manufacturer's liability shall be limited to the replacement of the product as sole compensation for breach of the guarantee. Under no circumstances shall the manufacturer be liable for any special, accidental or consequential damages, on the grounds of breach of guarantee, breach of agreement, negligence, or any other legal notion.

WAIVER

This Guarantee shall contain the entire guarantee and shall be prevailing over any and all other guarantees, explicit or implicit (including any implicit guarantees on behalf of the dealer, or adaptability to specific purposes), and over any other responsibilities or liabilities on behalf of the manufacturer. The manufacturer does neither agree, nor empower, any person, acting on his own behalf, to modify, service or alter this Guarantee, nor to replace it with another guarantee, or another liability with regard to this product.

UNWARRANTED SERVICES

The manufacturer shall repair or replace unwarranted products, which have been returned to its factory, at its sole discretion under the conditions below. The manufacturer shall accept no products for which no prior notice has been received via the RAN form at: <http://www.teletek-electronics.com/en/support/Service>.

The products, which the manufacturer deems repairable, will be repaired and returned. The manufacturer has prepared a price list and those products, which can be repaired, shall be paid for by the Customer. The devices with unwarranted services carry 6 month guarantee for the replaced parts.

The closest equivalent product, available at the time, shall replace the products, the manufacturer deems un-repairable. The current market price shall be charged for every replaced product.

STANDARDS AND CONFORMITY

The ECLIPSE Series control panels are designed according and with conformity to the European Union (EU) Low Voltage Directive (LVD) 2006/95/EC and Electro-Magnetic Compatibility (EMC) Directive 2004/108/EC.

The CE mark is placed for indication that the ECLIPSE Series control panels complies with the requirement of EU for safety, health, environmental and customer protection.

The ECLIPSE Series control panels are suitable for installation and operation in security systems specially designed to comply with standard EN 50131-1, grade 2.

1. GENERAL INFORMATION

ECLIPSE Series are control panels providing security and management of small and medium residential or office sites.

The ECLIPSE family includes:

- **ECLIPSE 8** for management of small sites up to 8 zones organized in 1 common area and for up to 8 users.
- **ECLIPSE 32** for management of medium sites up to 32 zones and 8 independent areas and for up to 64 users.

In ECLIPSE Series control panels are available two types of users: Managers and Regular users of the system. The Managers have extended rights for programming of special system menus and the regular users have limited rights for operation with the system.


Manager of the system can be every user, who has been granted manager rights. User 1 is the Chief Manager and his/her rights cannot be changed. The users can be granted manager rights by the Engineer of the system, as well as by another Manager of the system with programming rights.

The Manager programming menu is structured with 2-digit addresses numbers. The User programming menu is structured with 1-digit address numbers.

Entrance in the manager menu is possible even when the system is armed, but there are certain limitations, for example zones cannot be bypassed in armed mode.

It is possible to enter in manager programming menus from several keyboards at a time using the same manager access code.

The structure of Manager and User programming menus is as follow:

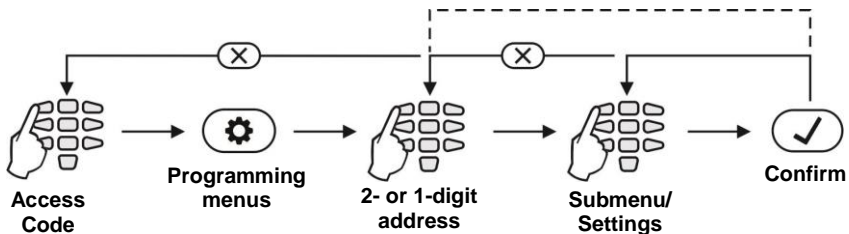

Note: When programming a submenu, after confirmation you will return one step back – when bypassing zones, programming access codes, association of areas, etc. When programming a setting, like date, time and other, after confirmation you will return two steps back to the main screen for entering address number.




Before starting any programming or changing the system parameters, you should read carefully the provided detailed information for each menu and make sure that you understand the descriptions. Keep this manual in safe place and refer to the instructions every time you are about to program or change system parameters and settings.

2. SUPPORTED KEYBOARDS

According your system configuration you may use one of the following keyboard models:


Keyboard	Display	Areas	Zones	Card reader
LED 8	LED	1	8	×
LED 16	LED	2	16	×
LED 32	LED	8	32	✓ (option)
LCD 32	LCD	8	32	✓ (option)
LCD 32S	LCD	8	32	✓

2.1 LED Keyboards

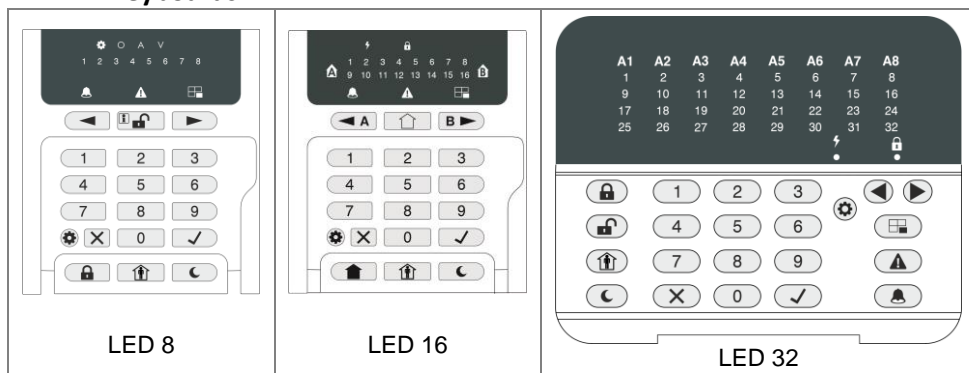





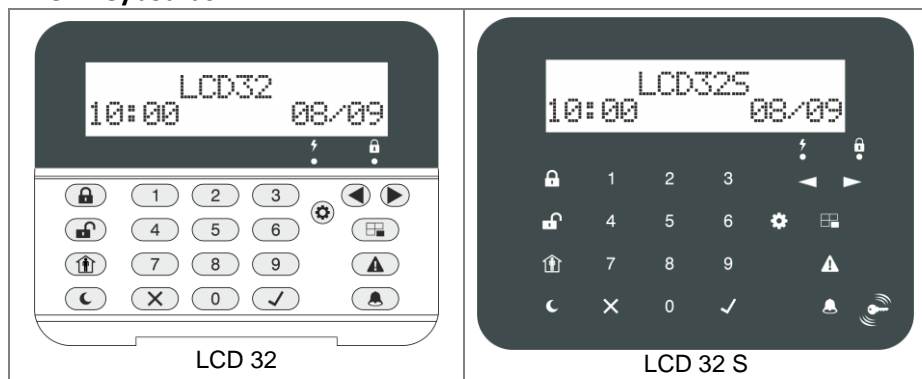






Front view of ECLIPSE LED keyboards with open protective cover. The keyboards are equipped with LED information display and rubber keypads for operation.

2.2 LCD Keyboards



Front view of ECLIPSE LCD keyboards, where LCD 32 is with open protective cover. The keyboards are equipped with LCD text display. LCD 32S is with sensitive buttons and built-in card reader.















2.3 Buttons Functionality

Button	Function	Description
	ENTER	Confirmation of the entered data. <u>For LED 8 and LED 16 keyboards:</u> Use the button to review the memory log file, the system troubles and the bypassed zones – the respective system LED is blinking during the review.
	CANCEL	Canceling the entered parameters; exit from a programming mode.
	FULL ARM	Quick button for Full Arming Mode.
	DISARM	Disarming the system. The button has a special function in text entering mode – deletes the current symbol and moves the cursor on one position to the left (like Backspace button on a standard PC keyboard).
	STAY ARM	Quick button for Stay Arming Mode. The button has a special function in text entering mode – shifting between small and capital letters.
	SLEEP ARM	Quick button for Sleep Arming Mode.
	PRG	Entry in Manager and User programming modes.
	BYPASS**	Bypassing zones. The button lights on permanently if there are bypassed zones in the system. The button is blinking during the bypassed zones review.
	TROUBLE**	Reviewing the system troubles. The button lights on permanently if there are system problems. The button is blinking during the system troubles review.
	MEMORY**	Reviewing the memory events log file. The button lights on permanently if there are memory events. The button is blinking during the memory events review. The button has a special function in text entering mode – entering of special symbols.
	Scroll arrows	Arrows for moving the cursor on the left and on the right in programming mode. <u>For LED 16 keyboards:</u> The buttons are used for arming and disarming the A and B area.
0 - 9	Digit Buttons	Digital buttons for entering parameters, codes, etc.

* Used in the previous design of keyboard models LED8, LED32, LCD32 and LCD32S, as the button has the same functionality.

****Note:** The functionality of BYPASS, TROUBLE and MEMORY buttons for LED8 and LED16 keyboards is accessible through the manager and user menus only with the respective LED indication on the display.

2.4 Indication

Button/LED	Color	Description
 ()	Red	The area is in FULL ARM mode.
	Red	The area is in STAY ARM mode.
	Red	The area is in SLEEP ARM mode.
	Red	Permanently lit - there are bypassed zones in the system. Blinking - review of the bypassed zones in the system.
	Red	Permanently lit - there are system troubles. Blinking - review of the system troubles.
	Red	Permanently lit - there are recorded memory log events. Blinking - review of the memory log events.
	Red	Indication for bypassed zones in keyboards LED8 and LED16. Permanently lit - there are bypassed zones in the system. Blinking - review of the bypassed zones in the system.
	Red	Indication for system faults in keyboards LED8 and LED16. Permanently lit - there are system troubles. Blinking - review of the system troubles.
	Red	Indication for memory events in keyboards LED8 and LED16. Permanently lit - there are recorded memory log events. Blinking - review of the memory log events.
 	Green	The system is disarmed or only certain areas in the system are armed. Blinking during the entry/exit time.
	Red	All used areas in the system are armed. Blinking in programming mode.
 	White	Permanently lit - power supply from the panel; lit off - no power supply from the panel. Blinking in programming mode.
Areas:** A and B A1 – A8	Off	The area is not used.
	Green	Permanently lit - the area is disarmed. Blinking - the area is ready to be armed after user code is entered and selected arming type.
	Red	Permanently lit - the area is armed. Blinking - entry/exit time is running; showing the available areas to disarm after a user code has been entered.
Zone numbers**	Red	Permanently lit - indication for trouble or when the bypassed zones, system troubles or events are being viewed. Blinking - indication for an open zone when the system is disarmed.

* Used in the previous design of keyboard models LED8, LED32, LCD32 and LCD32S, as the button has the same functionality.

** The indication applies only to LED keyboards

2.5 Sound Signalization






All ECLIPSE Series Keyboards have sound signalization for occurring of different system events. The sound signalization has 4 volume levels adjustable at address 90 from the Manager programming menus.

Sound Signal	Description
Button	Single short beep indicating the pressing of a key.
Confirmation	Two long sound signals, indicating the system confirmation to executed operation.
Cancel operation	A single long beep, indicating system incorrectly executed operation.
Entry time	Continuous beep, indicating intrusion into an entrance zone.
Exit time	Short beeps, indicating the system is armed and the user is required to leave the entrance zone. Ten seconds before the exit time is over beep frequency increases.
Technical problem	Two short beeps at every 20 sec, indicating a technical trouble. To stop the signalization - press the TROUBLE button.
Chime	Short beeps with subsequently increasing period, indicating intrusion into a zone with an activated chime option.
Fire alarm	Three sound signals in sequence repeated every 5 seconds. That kind of signalization shows activated fire detector in the premises.

2.6 Directions for Operation with LED Keyboards

LED 8, LED16 and LED32 are keyboards for management and programming with LED displays. LED 8 shows information about 8 zones and manages 1 area. The display of LED16 shows information about the first 16 zones and 2 areas of the systems, while the display of LED32 shows information about all 32 zones and 8 areas of the system. The entrance of codes, addresses, and data is done via the digit buttons. For the different arming modes fast buttons with the respective symbol are used.

2.6.1 Special indication used in LED 8 keyboard

LED	Indication	Description
	Red	The system is in manager or user programming mode.
	Red	[O] is short from OPERATION – in programming mode.
	Red	[V] is short from VALUE – in programming mode.
	Green	The system is disarmed; normal operation mode.
	Off	The system is armed or the system is not ready to be armed.
A		Not used in manager and user programming menus.

* Used in the previous design of the keyboard as the button has the same functionality.

2.6.2 Programming by Manager

After manager code is entered, a confirmation beep is heard from the keypad. Entrance in programming mode by a manager is done by pushing the PRG (⊗) button. Two digits are lit on the keyboard display, while the „lightning” (white) and „padlock” (red) LEDs flash only on the keyboard, which is being used. The system expects entrance of 2-digit code for programming by manager. When a digit button is pushed the corresponding zone LED lights up. When the “0” button is pushed zone number 10 lights up (button 0 for LED 8).

2.6.3 Programming by User

Users in the system do not possess manager rights. Every code with forbidden option 8 Manager (programmed by the manager of the system) is a user code.

After user code is entered a confirmation beep is heard from the keyboard. Entrance in programming mode by a user is done by pushing the PRG (⊗) button. One digit is lit on the keyboard display, while the „lightning” (white) and „padlock” (red) LEDs flash only on the keyboard, which is being used. The system expects entrance of 1-digit programming address by a user.

2.7 Directions for Operation with LCD Keyboards

The *LCD32* and *LCD32 Sensitive* are keyboards for management and control with text LCD displays.

To enter codes, addresses and parameters use the digit buttons. For arming the system can be used neither the quick buttons with the respective pictograms, or to choose the arming type from the screen scrolling with the arrows and confirmation with ENTER button. Use the provided further on detailed descriptions of the all addresses in the system. To exit the manager or user programming menu press CANCEL button several times until return to main screen in normal operation mode.

Attention: If no action (pushing a button) is performed for 30 sec. after entering the manager or user programming menu, the system automatically returns to the main screen and is again in normal operation mode. Entrance in programming mode by a manager or user is possible via more than one keyboard at the time even with the same code.

2.8 Entering Text with LCD Keyboards

The keyboard models *LCD32* and *LCD32 Sensitive* support text entering including small and capital letters, digits, punctuation marks and other specific symbols.

The regular letters and digits can be entered directly by the buttons. It is possible to enter text up to 16 symbols including space. Use the STAY ARM button to enter capital letters and button DISARM to delete a symbol. MEM button provides entering of special symbols.

Tables for correspondence of the buttons:

Button	Letters, digits				
0	—	0			
1	1				
2	a	b	c	2	
3	d	e	f	3	
4	g	h	i	4	


Button	Letters, digits				
5	j	k	l	5	
6	m	n	o	6	
7	p	q	r	s	7
8	t	u	v	8	
9	w	x	y	z	9

3. OPERATION INSTRUCTIONS


3.1 Arming With a Keyboard

3.1.1 Full Arming Mode

Full Arm mode means that all zones in the armed areas are being protected. Full Arm can be initialized after entering a valid user code or with quick access without code, when this option is allowed in the menus for engineer programming.

Note: The  button is used in the previous design of the keyboards and LED16.

Sequence of buttons for activation of "FULL ARM" mode:

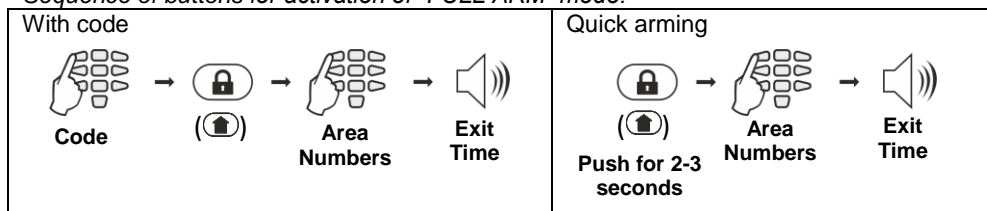


3.1.2 Stay Arming Mode

Stay Arm mode means that the user can remain in certain, already bypasses zones of the protected areas. Stay Arm mode can be initialized after entering a valid user code or with fast access without code, when this option is allowed in the menus for engineer programming.

Note: Certain users may not be permitted to ARM the system in "Stay ARM" Mode.

Sequence of buttons for activation of "STAY ARM" mode:

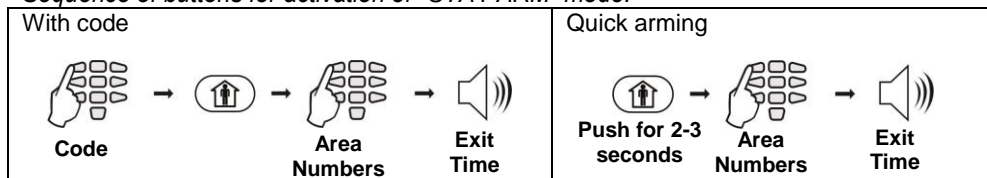


3.1.3 Sleep Arming Mode

Sleep Arm mode means that the user can remain in certain, already bypasses zones of the protected areas. Sleep Arm mode differs from Stay Arm mode in that for some of the areas it is initialized without exit time. In that case, the arming of the system is instant. Ask your installer for more details about your own system.

Note: Certain users may not be permitted to ARM the system in "Sleep ARM" Mode.

Sequence of buttons for activation of "SLEEP ARM" mode:

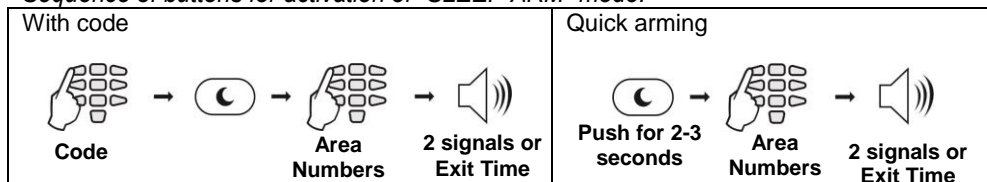

3.1.4 Arming All Available Areas in the System

The user can perform arming of all available for operation areas in system. To arm all areas use button "0". According the way of arming – with or without entering a user code – the number of the armed areas can be different.


With a user code

When using a code for arming, the user can arm at the same time *only all associated to its own code areas*. The user can be allowed to operate with one, several or all areas in the system – that depends on the programmed for the code at address 07 in the Managers menu.

Quick Arming (Without a user code)

When performing quick arming, without entering code, the user can arm at the same time *all available for operation areas in the system*.

Sequence of buttons for activation of all areas in the system:

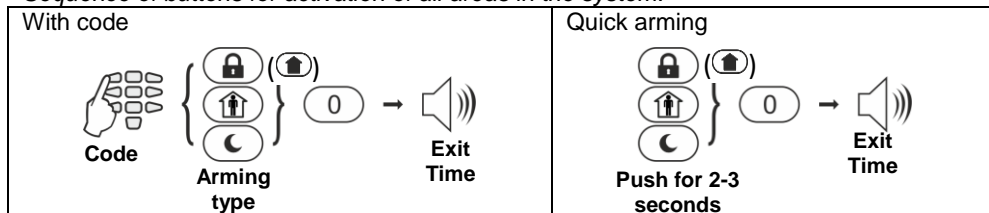

3.1.5 Viewing the Status of the Areas

The user can check-up what is the arming status of every one available area in the system. The check-up is different and depends on the used control keyboard.


LED Keyboards

When the system is armed the numbers of the armed areas are lit in red.

At LED 8 keyboard, the DISARM button is off, and the quick button of the used arming mode lights on in red.

At LED 16 and LED 32 keyboards, the used arming mode is checked after entering a valid code and area number.

Sequence of buttons for checking-up the area status:

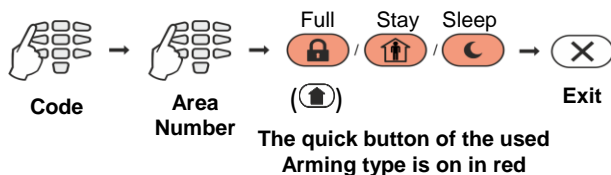

Note:


LED 16: The two area numbers are named A and B. To check the area arming mode use the buttons with arrows and the respective area name.

Note: The button is used in the previous design of the keyboards and LED16.

LCD Keyboards

The status of the used areas is viewed with pressing of ENTER button. Note that the “padlock” LED lights up in red only when all the used areas are armed. The “padlock” LED lights up in green if at least one of the used areas is disarmed.

To check-up the areas status simple press the ENTER button:



The screen displays the area numbers with the current status for every one of them. The description of the area status is as follows:

Status	Description
—	The area is disarmed and ready to be armed.
n	The area is disarmed and not ready to be armed.
f	The area is armed in FULL Arming Mode.
s	The area is armed in STAY Arming Mode.
S	The area is armed in SLEEP Arming Mode.
*	Entry/ Exit time is running for the area.
A	Alarm event in the area.
F	Fire alarm in the area.
M	Memory event in still armed area.
n	Memory event in disarmed area.
Empty	No symbol – the area is not used in the system.

3.1.6 Reviewing the Open Zones

In normal operation mode the numbers of all open zones in the system are displayed one-by-one on the LCD screen or are blinking on the LED display.

Attention: Areas with currently open zones cannot be armed!

The User can filter the displayed information and to review only those zone numbers which are associated to the area that has to be armed. The User can review only those areas for which he has assigned rights to operate!

LED Keyboards

The numbers of all open zones in the system are blinking. To review (filter) the zone numbers associated to an area the User has to enter a valid code and area number. Only the open zones for that area will proceed to blink and the area number is lighting on.

LCD Keyboards

The numbers of all open zones in the system are displayed one-by-one on the LCD screen. To review (filter) the zone numbers associated to an area the User has to enter a valid code and area number. Only the open zones for that area will proceed to be displayed as text messaged.


The exit from the open zones review mode is with pressing CANCEL button or automatically after 30 sec.

3.1.7 Changing the Arming Mode without Disarming

This is an extra functionality for changing the current arming mode with other without disarming before that. To use this feature keep in mind that the following priority between arming modes is adopted:

Priority	Arming	Description
1	Full	The Full arming mode cannot be changed with other arming.
2	Stay	The Stay arming mode can be changed to Full arming.
3	Sleep	The Sleep arming mode can be changed to Full or Stay arming.

Example: Areas 1-4 are in Full ARM mode, and 5-8 are in Sleep ARM mode. To change the arming mode of area 5 do in sequence:



Note: Use the button “0” to change all areas from one arming mode to another.

3.2 Arming Via a Card Reader

Arming with proximity card is possible when there is a stand-alone proxy reader or a keyboard with built-in reader connected to the system. To arm the system the user needs to put the card over the reader but not further than 1 cm.

3.2.1 Arming via Built-in Proxy Reader in Keyboard

Depending on the arming options set at address 10 in the Manager programming menus, only one mode of arming can be activated with a proxy card.


When the proxy reader is built-in in the keyboard it is located in the middle between the MEMORY, TROUBLE, ENTER and “9” buttons.

When using LCD keyboard, after the proxy card is recognized, the numbers of the areas and their current status are shown on the display.

When using LED keyboard, after the proxy card is recognized the numbers of the areas that are ready to be armed are blinking in green.

The system will wait for the number of areas to be entered.

Sequence for arming with a built-in in keyboard proximity card reader:

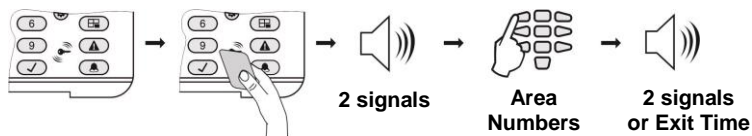

Notes:

Use the button “0” to arm all associated to the user code areas.

The built-in card reader in LCD 32 Sensitive keyboard is situated in the right bottom corner on the front panel and it is marked with a “key” pictogram.

3.2.2 Arming via Stand-alone Proxy Reader

The User can arm the system via stand-alone proxy reader in one of the following arming modes, which are programmed in advance from the system engineer:

- **“Full ARM”** – of all available areas in the system
- **“MODE A”** – a specific combination of arming modes for the used areas
- **“MODE B”** – a specific combination of arming modes for the used areas

To arm the system in one of the listed above arming modes, the User has to place and hold the proxy card in front of the stand-alone reader until activation of the respective LED indication:

- **“Full ARM”** – RED LED is lighting on
- **“MODE A”** – GREEN LED is lighting on
- **“MODE B”** – YELLOW LED is lighting on

The reader beeps at every changing of the arming mode. When the LED indication of the selected arming mode is on the User has to remove the card. After the exit time is over the LED of the activated arming mode lights on permanently.

Note: Ask you installer for details about the arming modes set for your system.

3.3 Disarming


Every user can disarm only those areas associated for operation to its personal code.

Note: Certain users may not be permitted to disarm the system.


3.3.1 Disarming via keyboard

The user can disarm one, several or all areas at the same time.

Sequence for disarming via keyboard:

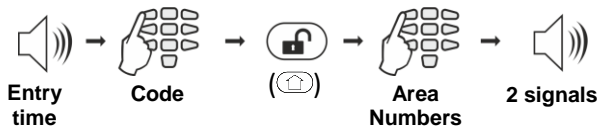

Notes:

Use the button “0” to disarm all associated to the user code areas. **Note:** The  button is used in the previous design of the keyboards and LED16.

3.3.2 Disarming via built-in card reader in a keyboard


Disarming with proximity card is possible and when there is a proxy reader built-in in a keyboard. To disarm the system the user needs to put the card in front of the reader but not further than 1 cm.

When using LCD keyboard, after the proxy card is recognized, the numbers of the areas and their current status is shown on the display.

When using LED keyboard, after the proxy card is recognized the numbers of the armed areas blink in red.

The system will wait for the number of the areas to be entered.

Sequence for disarming via card reader:

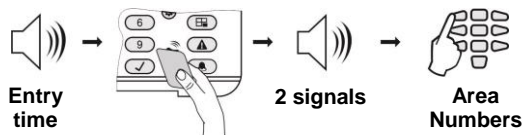

Notes:

Use the button “0” to disarm all associated to the user code areas.

3.3.3 Disarming via stand-alone proxy reader

Place and hold the card in front of the reader until all LED indicators are off. Remove the card to disarm the system – the proxy reader will beep for confirmation.

3.4 Stopping the Sounders

A triggered alarm can be reset by entering a valid user code.

Note: The user code must have assigned rights to operate with area where the alarm event is triggered off the sirens.

3.5 Panic Buttons

By using a combination of buttons the user can send an alarm signal without triggering the siren off. To send an alarm signal:

- For “FIRE ALARM” signal, press and hold the 7+9 buttons for 2 seconds.
- For “MEDICAL ALARM” signal, press and hold the 4+6 buttons for 2 seconds.
- For “PANIC ALARM” signal, press and hold the 1+3 buttons for 2 seconds.

3.6 Ambush Code

Ambush code is a system code which is used to disarm the system, but it also sends an “alert” signal to the monitoring station. It is used when the user is forced to disarm the system.

The Ambush code is formed by increasing the last digit of the user’s personal code by 1. If the last digit is 9, it is replaced by 0.

For example: Personal code: 4615 → Ambush code: 4616
 Personal code: 4619 → Ambush code: 4610

3.7 Technical Troubles Review

In case of system trouble the TROUBLE button lights on permanently. On the LCD keyboards text message “Trouble [TRBL]” is displayed.

To review the system troubles press the TROUBLE button. In TROUBLE MODE viewing the TROUBLE button starts blinking. To exit TROUBLE MODE press CANCEL or wait 30 seconds for the system to leave this mode automatically.

For LED 8 and LED 16 keyboards the system troubles are indicated with permanently lit TROUBLE LED. To review the system troubles single press the ENTER button.

The indication for system trouble will stop automatically after the trouble is restored.

The system troubles are displayed with permanently lit on number on the LED display and with a text message on LCD displays. The text messages are displayed one by one or can be scrolled manually with the arrows.

The list with possible system troubles is shown in the table below:

LED	LCD	Description
❶	1. AC Loss	Main power supply loss.
❷	2. Batt Trouble	Low battery charge or back-up battery is missing.
❸	3. Blown fuse	Blown out fuse.
❹	4. Tel.lineTRBL or Comm.Fail	Telephone line loss. Communication with monitoring station failed.
❺	5. Tamper	Open TAMPER switch in the system.
❻	6. Sysbus err	System buss error – short circuit in the system bus line or lost device.
❼	7. FIRE LINE ERROR*	The fire line connection is broken up.
❽	8. SOUND Fault*	Trouble in the siren line.

* Not supported in ECLIPSE 8 control panel.

3.8 Checking the Bypassed Zones


According the used keyboard the indication for bypassed zones differs.

Keyboard	Indication and checking the bypassed zone
LED 8/ LED 16	The BYPASS LED is lit. In order to check the bypassed zones you need to press the ENTER button once. The numbers of the bypassed zones are lit, while the BYPASS LED blinks. Note: The LED 8 keyboard has indication for bypassing 01 to 08, and LED 16 – for 01 to 16 zones. If there are bypassed zones out of their range, they are not shown on the screen.
LED 32	The BYPASS button is lit. In order to check the bypassed zones you need to press the BYPASS button once. The numbers of the bypassed zones are lit, while the BYPASS button blinks.
LCD 32 / LCD 32 Sensitive	The BYPASS button is lit. In order to check the bypassed zones you need to press the BYPASS button once. Information about the first bypassed zone is shown on the display, while the other zones can be checked with the arrow buttons, the BYPASS button blinks.

4. USERS' PROGRAMMING MENUS

There are no default codes for ordinary users in the system. The Manager in the system can set new codes and allow certain users to have manager rights.

To enter user programming mode, enter in consecutive order:




* Code without manager rights.

Quick table for Users' Programming Menu

Address Number	Programming parameter	ECLIPSE 8	ECLIPSE 32
1	Changing own code	✓	✓
2	Memory LOG view	✓	✓
3	Chime	✓	✗
4	Zone bypassing	✓	✓

4.1 Changing own code

Every user without manager rights in the system can change only his/her own access code. To change the code the user needs to enter the currently valid code:

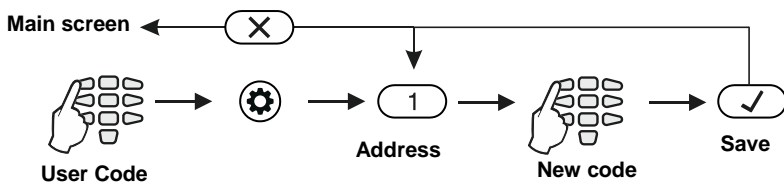

After confirming the new code with the ENTER button, if the code is accepted, the keyboard emits a confirmation beep and will return to code entry screen. If the entered code is already being used in the system (a valid user or ambush code), the keyboard emits a rejection beep. For LCD keyboards there is also "Invalid" message on the screen. The system returns to address entry screen.

Going back to the main screen is done by pressing the CANCEL.

Note: Certain users may not be permitted to change their own code. In order for users to be allowed to change their codes, option «4.Programming» at address 06 of the manager programming menus needs to be allowed.

4.2 Memory LOG review by User

Viewing the memory log is done at address 2 or by pressing the MEMORY button after entering a user code:



The events are viewed in consecutive order, one by one, from the last to first with the help of the arrow buttons.

On the screen of LCD keyboards a text message with the event type, consecutive number starting from 001 and date and hour are being displayed.

On the screen of LED keyboards the information about the type of event is shown in hexadecimal form. The lit digits on the display form a code defining the event, which can be checked in the Table of memory log events in the Appendix. By pushing button "2" additional information about the user, zone or device is being displayed. No information about the date and time is available when using a LED keyboard.

Notes:

The memory log can be checked also when the system is armed after entering a valid user code.

Checking the memory log with LED 8 and LED16 keyboard is possible only by entering address 2, because these keyboards do not have a MEMORY fast button.

4.3 Turning on the Chime signalization by User

Attention: This menu is available for ECLIPSE 8 control panel only.


The Chime signalization is a sound signal from the keyboards when opening an entry/ exit type zone. The option can be enabled or disabled by the user. By default, the Chime signalization is DISABLED.

To enable the Chime signalization the user first has to enter valid access code:




Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 / LCD 32 Sensitive



Press the digit buttons or arrow buttons to change alternatively the status of the Chime.

LED 16 / LED 32



Press the digit buttons or arrow buttons to change alternatively the state of the Chime.


LED 8

After entering the address 3, the digit buttons 1 to 9 are off – the Chime is disabled. Press a random digit button or arrows to enable the Chime. The Chime is enabled when the buttons from 1 to 9 are on.

The choice is confirmed by pressing the ENTER button.

4.4 Zone bypassing by User


Every user can bypass only zones that are associated to areas he is allowed to work with (arm and/or disarm). Bypassing zones is done at address 4 or by pushing the BYPASS button, after a valid user code has been entered:

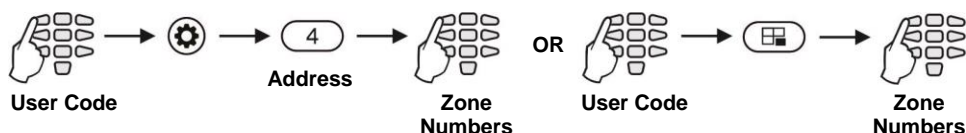

Note: Bypassing zones with LED 8 and LED16 keyboards is possible only by entering address 4, because these keyboards do not have a BYPASS fast button.

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive



Pushing the digit buttons or arrow buttons changes alternatively the state of the zone. When the user chooses to bypass the zone, the BYPASS button is lit. When return to normal operation mode, the BYPASS button is lit permanently on all keyboards.

LED 16 or LED 32



Pushing the digit buttons or arrow buttons changes alternatively the state of the zone. When the user chooses to bypass a zone the BYPASS button is lit, while digits 1 to 8 of the display are lit permanently. After going back to normal working mode the BYPASS button is lit permanently on all keyboards. In the LED16 keyboard BYPASS LED is lit permanently.

LED 8

Enter at the address 4 and choose a zone number for bypass – the LED for zone 1 is blinking on the display. If the buttons 1 to 9 are off the zone is not bypassed; if the buttons 1 to 9 are on – the zone is bypassed. To change the zone status, press a random button or the arrows. Confirm with ENTER button. The BYPASS LED is lit permanently.

The choice is confirmed by pressing the ENTER button.

To check the bypassed zones in the system see item 3.8.

Note: Certain users may not be permitted to bypass zones. In order for users to bypass zones option «3. Bypassing» at address 06 of the managerial programming menus needs to be allowed.

5. MANAGERS' PROGRAMMING MENUS

User 01 is always Chief Manager is the system. The default Chief Manager Code is 0000.

Important Notes:

The Chief Manager's rights cannot be changed.

One Manager cannot change other Manager codes.

The Manager can change only regular User codes associated to common Area number(s) with him.

To enter manager programming mode, enter in consecutive order:



Quick table for Managers' Programming Menu


Address Number	Programming parameter	ECLIPSE 8	ECLIPSE 32
01	Changing User codes	✓	✓
02	Memory LOG view	✓	✓
03	Chime	✓	✗
04	Zone bypassing	✓	✓
05	Engineer access	✓	✓
06	User attributes	✓	✓
07	User areas	✗	✓
08	User names	✓	✓
09	User timeslot	✗	✓
10	User Proxi attributes	✓	✓
11	Add/ Delete user card	✓	✓
13	User clone	✗	✓
14	Setting Time	✓	✓
15	Setting Date	✓	✓
16	Remote access	✓	✓
17	Remote access attributes	✓	✓
18	Manual test	✓	✓
90	Buzzer level	✓	✓
91	Brightness	✓	✓
92	Scroll speed*	✓	✓
93	Sensitive backlit**	✓	✓

* For LCD keyboards only

** For LCD 32 Sensitive keyboard only

5.1 Creating and Changing User codes

Creating new and changing existing user codes is done at address 01. To create a new or change an existing use code the system Manager enters in consecutive order:

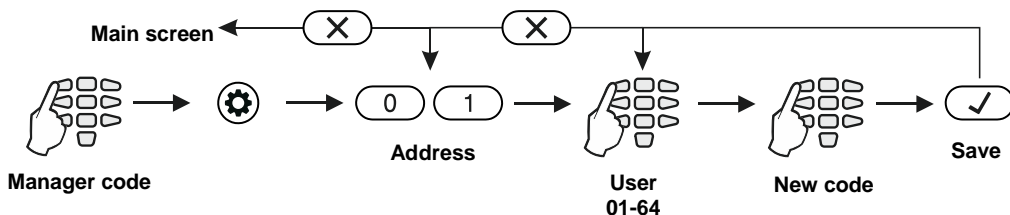

Attention: In ECLIPSE 32 control panel you cannot create or change other Manager codes, so before that go to address 06 and disable the 8.Manager right for the regular users. By default, User numbers 01 to 10 are with set 8.Manager attribute!

After confirming the new code with the ENTER button, if the code is accepted, the keyboard emits a confirmation beep and goes back to the user number screen. If the entered code is already being used in the system (a valid user or ambush code), the keyboard emits a rejection beep. For LCD keyboards there is also "Invalid" message on the screen. The system goes back to address entry screen.

To return to the main screen press the CANCEL button a few times.

5.2 Deleting User codes

The complete removal of user (or manager) code is done by deleting its rights (address 06) and its associated areas (address 07). If only the rights are deleted the code will remain active but with limited functions – it could be used only to check the memory log and troubles in the system and to arm the associated areas in Full arm mode. To remove the code completely the code's associated areas need to be deleted as well – see items 5.6 and 5.7.

5.3 Memory LOG review by Manager

Viewing the events in the memory log is done at address 02 or by pressing the MEMORY button, after manager code has been entered:



The events are viewed in consecutive order, one by one, from the last to first with the help of the arrow buttons.


See also the detailed description of item 4.2.

5.4 Turning on the Chime signalization by Manager

Attention: This menu is available for ECLIPSE 8 control panel only.

The Chime signalization is a sound signal from the keyboards when opening an entry/ exit type zone. The option can be enabled or disabled by the manager. By default, the Chime signalization is DISABLED.


To enable the Chime signalization the user first has to enter valid manager code:



See item 4.3 for the visualization according the used keyboard.

5.5 Zones bypassing by Manager

Bypassing zones is done at address 04 or by pressing BYPASS button, after entering manager code:

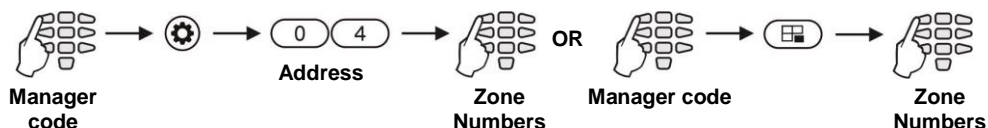

Note: Bypassing zones with LED 8 and LED16 keyboards is possible only by entering address 04, because these keyboards do not have a BYPASS fast button.


See item 4.4 for the visualization according the used keyboard.

To check the bypassed zones in the system see item 3.8.

Note: Certain Managers may not be permitted to bypass zones. In order for users to bypass zones option «3. Bypassing» at address 06 of the manager programming menus needs to be allowed.

5.6 Engineer Access


Disabling engineer access (access to the engineer programming menus) is done at address 05, after entering manager code:

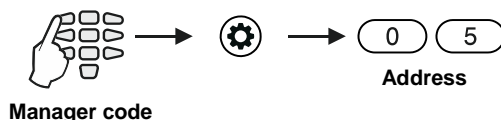

By default engineer access is ENABLED.

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive

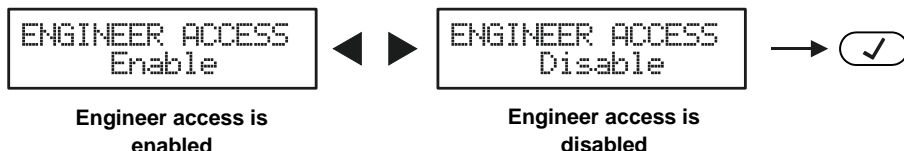

Press the digit buttons or arrow buttons to change alternatively the state of the parameter.

LED 16 and LED 32



Press the digit buttons or arrow buttons to change alternatively the state of the parameter.
The engineer access is allowed when all digits from 1 to 8 are lit.


LED 8

After entering the address 05, the digit buttons 1 to 9 are on – the Engineer access is enabled. Press a random digit button or arrows to disable. The Engineer access is disabled when the buttons from 1 to 9 are off.

The choice is confirmed by pushing the ENTER button.

5.7 Assigning User attributes

Assigning attributes to users is done at address 06, after entering manager code:

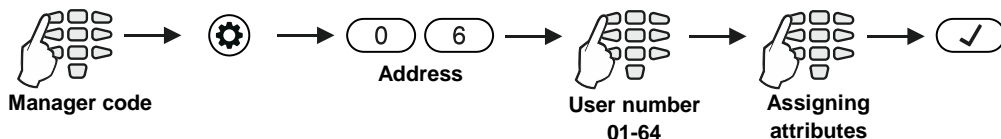

Attention:

User code 01 is Chief Manager and always has full access and assigned attributes which cannot be changed or deleted!

Function of the user attributes:

1. Disarm	The user code can disarm the system.
2. Stay and Sleep Arm	The user code can arm the system in STAY and SLEEP mode.
3. Zone Bypass	The user code can bypass zones in the protected site.
4. Programming	The user code has access to the user programming menus.
5, 6 and 7 are not used	
8. MANAGER in the system	<p>The user code has manager attributes in the system and has access to the Manager programming menus.</p> <p>Note: When attribute 8. Manager is set, attribute 4. Programming also needs to be set!</p>

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive



By pressing the respective digit button the attribute is alternatively enabled or disabled. The attribute is enabled when the digit is visualized on the screen. Disabled attributes are marked with “*”.

LED 16 and LED 32



By pressing the respective digit button the attribute is alternatively enabled or disabled. The attribute is enabled when the respective digit on the screen is lit.

LED 8

Enter at the address 06 and choose a user number– the LED for zone 1 is blinking on the display. The digit buttons corresponding to the assigned attributes are on. To disable an attribute press the respective number – the button is off, meaning the attribute is disabled.


The final choice is confirmed by pushing the ENTER button.

Note: If all attributes for a certain user code are disabled it does not get deleted from the system and it can be used for FULL ARM, viewing the memory log and system troubles.

5.8 Associating Area numbers to User

Attention: This menu is available for ECLIPSE 32 control panel only.

Associating areas to user codes is done at address 07, after entering manager code:

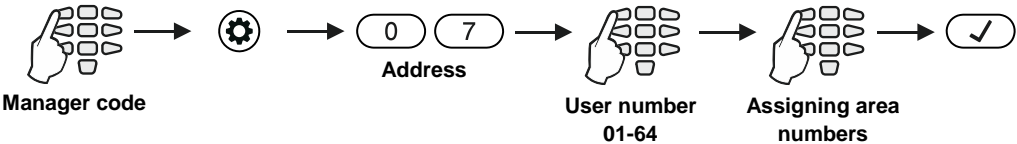


To every user code one or more areas can be assigned.

By default for User code 01 (Manager) are assigned for operation all area numbers.

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive



Areas 1, 2 and 3 are associated

Associating area 4

By pressing the respective digit button the area is alternatively enabled or disabled. The area is associated when the digit is visible on screen. When the area is not associated it is marked with the symbol “*”.

LED 16 and LED 32



Areas 1, 2 and 3 are associated

Associating area 4

By pressing the respective digit button the area is alternatively enabled or disabled. The area is associated when the digit is lit on the display. The numbers of the areas that are not associated are not lit.

LED 8

Enter at the address 07 and choose a user number- the LED for zone 1 is blinking on the display. The digit buttons corresponding to the associated areas are on. To disable an area press the respective number - the button is off, meaning the area is not associated.


The final choice is confirmed by pushing the ENTER button.

Note: When no areas are associated to a certain code, it is deleted from the system, regardless if there are attributes assigned to it.

5.9 Entering of User names

This address is available when working with LCD keyboard only.

Entering user names is done at address 08, after entering manager code:

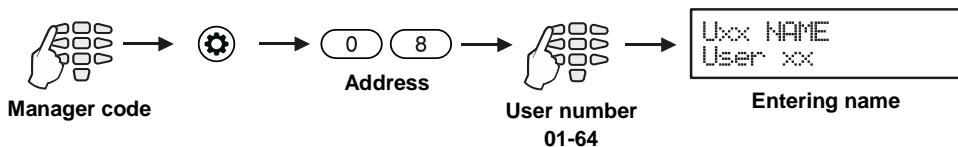

The name can be up to 16 digits long – letters, numbers and intervals.

The letters are chosen by pressing the respective digit number until reaching the desired letter. The cursor moves automatically after choosing a letter or number or manually with the help of the arrow buttons. If you need to enter a number, the respective button is pressed for 2-3 second – see also item 2.8.

The final name is confirmed by pushing the ENTER button.

5.10 Associating Timeslots to User

Attention: This menu is available for ECLIPSE 32 control panel only.

From 1 to 8 timeslots for working hours can be defined in the system. Their programming is done by Engineer. Beginning and end of the working hours, active days of the week and possibility for including holydays are set for every time slot.

Associating timeslots to user codes is done at address 09, after entering manager code:




Time slot from 1 to 8 is assigned to the address. Only one time slot can be associated to every user code.

Note:

If no time slot is associated to the code, the digit 0 is entered. This is the setting by default.

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive

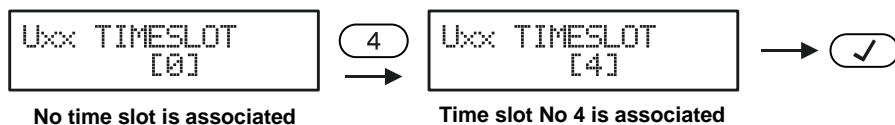

Timeslots are associated by pressing the respective digit number. The number of the chosen timeslot is visualized on screen.

LED 16 and LED 32



Timeslots are associated by pressing the respective digit number. The number of the chosen timeslot is lit permanently.

LED 8


Enter at the address 09 and choose a user number - the LED for zone 1 is blinking on the display. The digit button corresponding to the associated timeslot is on. By default the digit button 0 is on. To set other timeslot number you have to press the corresponding digit button.

The final choice is confirmed by pushing the ENTER button.

5.11 Assigning Attributes for user proxy card

At this address the manager sets rights to user cards for arming/ disarming the system via proxy reader built-in in a keyboard. The settings of this address do not concern the arming and disarming via stand-alone proxy reader.

Assigning attributes for work with proxy reader is done at address 10, after entering manager code:

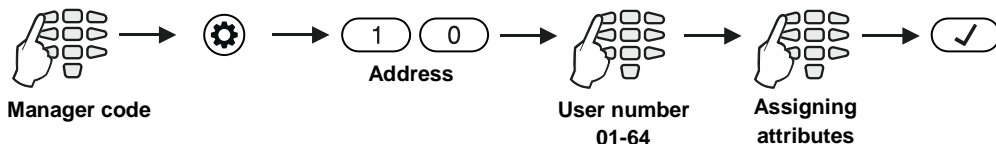

User attributes for work with a proxy reader:

1. Disarming	Disarming all areas associated to this user.															
2. Arming attributes	Parameters 2 and 3 are set in a certain combination for determining the options for arming with a proxy reader. The options are related with the type of arming mode. Choose a combination between options 2 and 3 depending on the type of arming mode, which will be used:															
3. Arming attributes	<table><tr><td>2</td><td>3</td><td>Arming mode</td></tr><tr><td>*</td><td>*</td><td>Arming is not allowed</td></tr><tr><td>*</td><td>3</td><td>FULL ARM</td></tr><tr><td>2</td><td>*</td><td>STAY ARM</td></tr><tr><td>2</td><td>3</td><td>SLEEP ARM</td></tr></table>	2	3	Arming mode	*	*	Arming is not allowed	*	3	FULL ARM	2	*	STAY ARM	2	3	SLEEP ARM
2	3	Arming mode														
*	*	Arming is not allowed														
*	3	FULL ARM														
2	*	STAY ARM														
2	3	SLEEP ARM														

Notes:

Only one arming mode can be used with every proxy card.

By default, all users are allowed to arm and disarm the system in SLEEP ARM mode.

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive

Uxx PRX ATTR
[123.....]

2

↔

Uxx PRX ATTR
[1*3.....]

✓

The card can disarm and arm in
SLEEP ARM mode

The card can disarm and arm in
FULL ARM mode

By pressing a digit buttons with the number of an option, it is alternatively enabled or disabled. The option is enabled when the digit is visible on screen. The option is disabled when the symbol “*” is shown.

LED 16 and LED 32



By pressing a digit buttons with the number of an option it is alternatively enabled or disabled. The option is enabled when the digit is lit on the display. The option is disabled when the digit is not lit.


LED 8

Enter at the address 10 and choose a user number - the LED for zone 1 is blinking on the display. The digit buttons corresponding to the set proxy attributes are on. To change settings press the respective button number according the table above.

The final choice is confirmed by pressing the ENTER button.


5.11 Registering a User card

Registering a user card is done at address 11, after entering manager code:

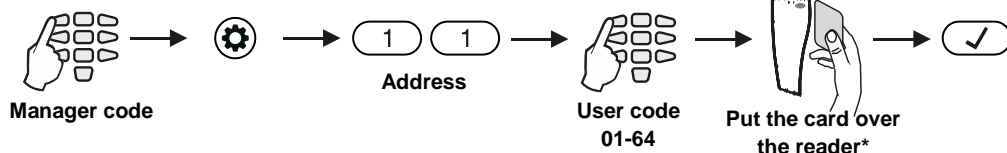

Depending on the keyboard used, the visualization on screen is as follows:


LCD 32 and LCD 32 Sensitive

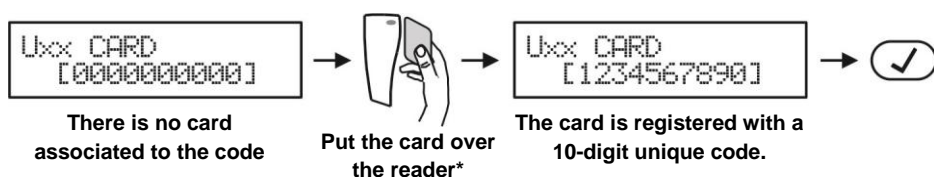

The card is recognized on the LCD display and its 10-digit unique code is shown on screen.

If the registration of a card to a user code is successful, after pushing the ENTER button, a confirmation beep is heard. If the card is associated to a different user, an "Invalid" message is shown on screen and a rejection signal is heard.

LED 16 and LED 32

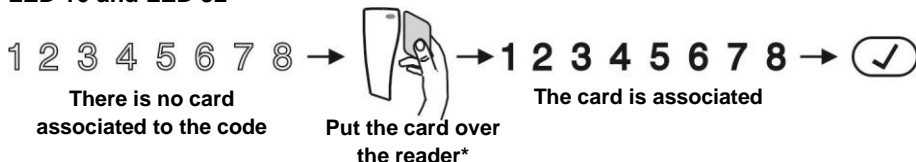

The card is recognized on the LED display with digits 1 to 8 permanently lit. If the registration of a card to a user code is successful, after pushing the ENTER button, a confirmation beep is heard. If the card is associated to a different user, a rejection signal is heard.

LED 8

Enter at the address 11 and choose a user number - the LED for zone 1 is blinking on the display. The registered user card is indicated with digit buttons 1 to 9 lighting on.


*** Note:**

The proxy reader can be a separate device or built in the keyboard (keyboards LED32 PR, LCD32 PR). The built in proxy reader is situated between the MEMORY, ENTER, "9" and TROUBLES buttons.


In LCD 32S the card reader is situated in the right bottom corner and is indicated with a "key" pictogram.

5.12 Deleting a User card

Deleting a card is done again at address 11, after entering a manager code:

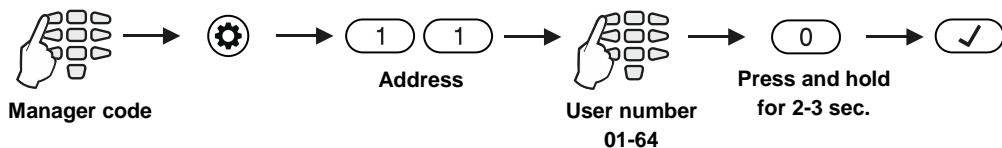

Depending on the keyboard used, the visualization on screen is as follows:

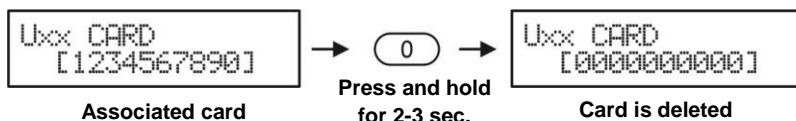LCD 32 and LCD 32 Sensitive**LED 16 and LED 32****LED 8**

Enter at the address 11 and choose a user number - the LED for zone 1 is blinking on the display. The registered user card is indicated with digit buttons 1 to 9 lighting on. Press and hold for 2-3 second the button "0".

Note:


No confirmation is necessary after deleting of a user card. You cannot reject the operation with pressing the CANCEL button. To register the card again, follow the steps in item 5.11.

5.13 Cloning Users

Attention: This menu is available for ECLIPSE 32 control panel only.


This is an address for copying (cloning) of attributes, rights, associations, time slots and rights for work with proxy cards. The address allows the settings of one user code to be copied to one or more users, which saves the need to program setting for every user separately.

Cloning is done at address 13, after entering manager code:



Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive

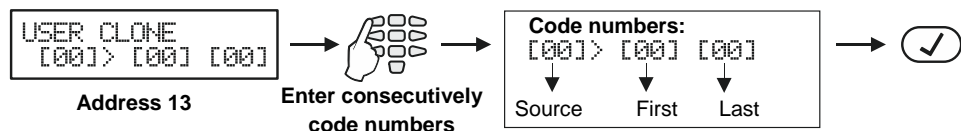

The cloning process starts by entering the number of the code that will be cloned ("Source"). After that the number of the first code in the series of codes which will accept the settings of the source is entered (First). In the end the last code in the series of codes is entered (Last).

For example, if you want the settings of code 02 to be cloned to codes 03 to 10 you need to enter: [02]> [03] [10].

If only one code is to accept the settings of the source, its number is entered both as "First" and "Last" in the series.

LED 16 and LED 32

After entering address 13, digit 15 on the display blinks, while digit 16 is permanently lit – the system indicates that it is expecting entering of "Source" code. After entering the first digit of the code – digit 15 is lit permanently, while digit 16 blinks. The second digit of the "Source" code is entered. The system now expects entering the "First" code, followed by "Last" code. The indication is the same.

LED 8

Not supported for programming of this address.

The cloning procedure is started with pressing the ENTER button.


5.14 Setting the Time

Setting the time is done at address 14, after entering manager code:



Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive



With the help of the digit buttons enter hour and minutes in the format [HH:MM] – hour from 00 to 23 and minutes from 00 to 59.

LED 16 and LED 32

After entering address 14, digit 15 on the display blinks, while 16 is lit permanently – the system indicates that it expects entering an hour from 00 to 23. Enter the current hour. After entering the first digit, on the display 15 is lit permanently, while 16 blinks. After the second digit is entered, 15 blinks again, while 16 is lit permanently – the system indicates that it expects entering minutes from 00 to 59. The indication is the same.


LED 8

After entering address 14, digit 1 on the display blinks, while 2, 3 and 4 are lit permanently – the system indicates that it expects entering the new time in the format [HH:MM] – hour from 00 to 23 and minutes from 00 to 59. Enter in sequence the new time. You can review the entered time using the arrow buttons – the set value at the respective position is indicated with a lit on digit button.

The entered time is confirmed by pressing the ENTER button.


5.15 Setting the Date

Setting the date is done at address 15, after entering manager code:

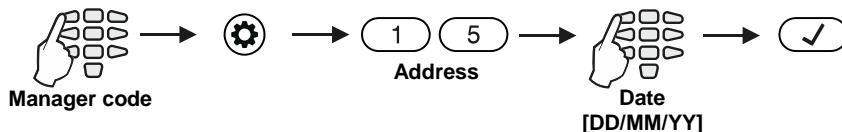

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive



With the help of the digit buttons, enter the date in the format [DD/MM/YY] – day, month, year.

LED 16 and LED 32

After entering address 15, on the display 15 blinks, while 16 is lit permanently – the system indicates that it expects entering a day from 01 to 31. Enter the day. After entering the first digit on the display 15 is lit permanently, while 16 blinks. After entering the second digit of the day 15 blinks again, while 16 is lit permanently – the system indicates that it expects entering a month from 01 to 12.. The indication is the same. Only the last two digits of the year are entered.

LED 8

After entering address 15, on the display 1 blinks, while 2, 3, 4, 5 and 6 are permanently lit – the system indicates that it expects entering of a new date in format [DD/MM/YY]. Enter in sequence the new date. You can review the entered date using the arrow buttons – the set value at the respective position is indicated with a lit on digit button.

The entered date is confirmed by pushing the ENTER button.


5.16 Blocking Remote Access Via UDL

At address 16 the Manager can enter the number of allowed incorrect code (ARM / DISARM / BYPASS / PC ID) via UDL for a period of 24 hours.

A number from 000 to 255 can be entered, while the default number of attempts is 10. When the set number of incorrect codes is reached the system will be blocked – communication via UDL will be impossible.


The system will be unblocked at 00:00h on the following day and communication via UDL will be possible again.

In order to set the number of allowed incorrect codes, the Manager needs to enter his/her code:

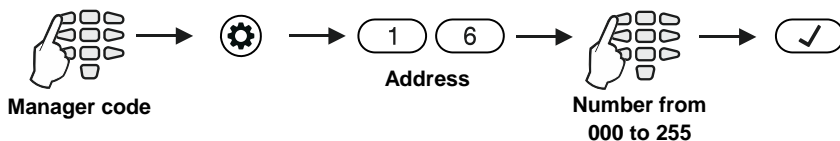

Depending on the keyboard used, the visualization on screen is as follows:

LCD 32 and LCD 32 Sensitive

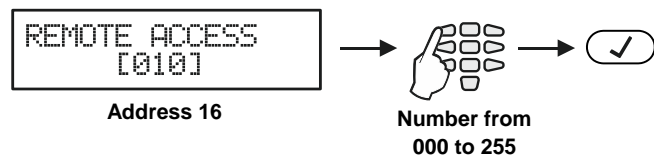

With the help of the digit buttons enter the number of allowed incorrect codes.

LED 16 and LED 32

After entering address 16, on the display 14 blinks, while 15 and 16 are lit permanently – the system indicates that it expects entering a number for allowed incorrect codes from 000 to 255. After entering the first digit on the display 14 and 16 are lit permanently, while 1 blinks. After entering the second digit on the display 14 and 15 are lit permanently, while 16 blinks. All 3 digits need to be entered.


LED 8

After entering address 16, on the display 1 blinks, while 2 and 3 are lit permanently – the system indicates that it expects entering a number for allowed incorrect codes from 000 to 255. After entering the first digit on the display 1 and 3 are lit permanently, while 2 blinks. After entering the second digit on the display 1 and 2 are lit permanently, while 3 blinks. All 3 digits need to be entered.

The entered number is confirmed by pressing the ENTER button.

5.17 Assigning Rights for Remote Access


At address 17 the Manager assigns rights for remote access of the system. The setting is common for all managers:

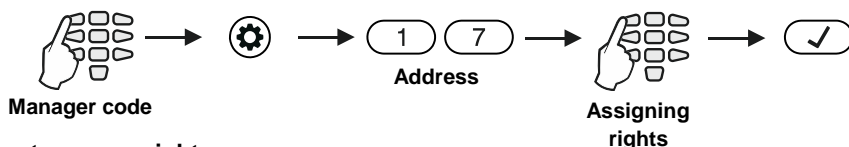**Remote access rights:**

1. REMOTE DISARM	Allows remote disarm
2. REMOTE ARM	Allows remote arm.
3. REMOTE CODES ACCESS	Allows remote change of user codes.
4. REMOTE PROGRAMMING*	Allows remote programming of the system.
6. REMOTE ZONE BYPASS	Allows remote zone bypass.

* By default, only "4.Remote Programming" attribute is enabled.

Depending on the keyboard used, the visualization on screen is as follows:

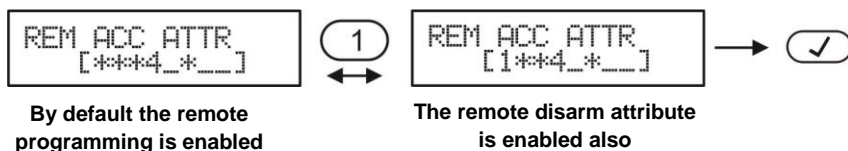LCD 32 and LCD 32 Sensitive

By pressing a digit button with corresponding number of attribute it is alternatively enabled or disabled. The attribute is enabled when the number is visualized on the screen. The disabled attributes are marked with "*".

LED 16 and LED 32

By pressing a digit button with corresponding number of attribute it is alternatively enabled or disabled. The attribute is enabled when the number is lit on the display. The disabled attributes are not lit.

LED 8

Enter at the address 17 the LED for zone 1 is blinking on the display. The digit buttons of the enabled remote access attributes are lighting on, and the digit buttons corresponding to the disabled attributes are off.

The final choice is confirmed by pressing the ENTER button.

5.18 Sending a “Manual test” Message

At address 18 the Manager can trigger off sending a “Manual test” message to a monitoring station or test message with a voice dialer (when such is fitted in the controlled panel).

It is used for testing the communicator without the need to send a technician on site. In order to send a “Manual test” message, the Manager needs to enter his/her code:




The communicator will start an automatic sending of messages – firstly towards the monitoring station (if there are phone numbers entered in the digital communicator) and afterwards via the voice dialer (if there is such fitted and there are phone numbers entered). The programming menu can be exit by pushing the CANCEL button.

5.19 Setting the Sound Level

At address 90 you can set the volume level of the keyboard buzzer. **The setting is individual for every keyboard** and there are 4 different volume levels.

In order to change the volume level of the keyboard buzzer, the Manager needs to enter his/her code first:

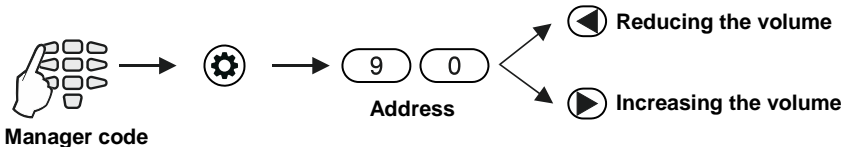

The volume levels are shown on the keyboard displays as follows:

LED – Zone numbers are lit	LCD – Number of symbols	Volume level
1	>	Very low
1 2	> >	Low
1 2 3	> > >	Medium
1 2 3 4	> > > >	High


The choice is confirmed by pushing the ENTER button.

Note:

The sound level cannot be muted or disabled.

5.20 Setting the intensity of illumination of the buttons

At address 91 a setting for the intensity of illumination of keyboard buttons is available. The setting is individual for every keyboard and there are 7 different levels of intensity. In order to change the intensity, the Manager needs to enter his/her code first:

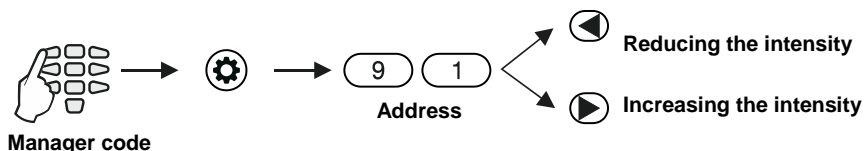

The levels of intensity are shown on the keyboard displays as follows:

LED - Zone numbers are lit	LCD - Number of symbols	Intensity level
1	>	Very low
1 2	> >	Low
1 2 3	> > >	Middle
1 2 3 4	> > > >	Normal
1 2 3 4 5	> > > > >	Normal
1 2 3 4 5 6	> > > > > >	High
1 2 3 4 5 6 7	> > > > > > >	Very high


The choice is confirmed by entering the ENTER button.

Note: The intensity of button illumination set at address 91 is seen only when the keyboard is used (a button is pushed). If no button is pushed in an interval of 10 seconds, the keyboard goes into standby mode, which has a default button illumination.

5.21 Scroll speed of messages in LCD keyboards

Attention: This address is available only in keyboards LCD32 and LCD32 Sensitive.

At address 92 the scroll speed of system messages on the keyboard display is set. The available levels are from 1 to 7. In order to change the scroll speed the Manager needs to enter his/her code first:

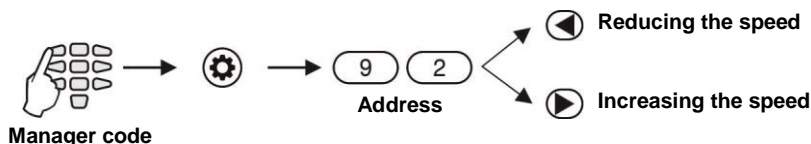

Scroll speed of messages is as follows:


Speed	LCD - Number of symbols	Scroll speed
1	>	Very slow
2	> >	Slow
3	> > >	Middle
4	> > > >	Normal
5	> > > > >	Normal
6	> > > > > >	Fast
7	> > > > > > >	Very fast

The choice is confirmed by entering the ENTER button.

5.22 Turning off the backlight of buttons in keyboard LCD32 Sensitive

Attention: This address is available only in keyboard LCD32 Sensitive.

At address 93 there is an option to turn off the backlight of the sensitive keyboard. The manager needs to enter his/her code first:

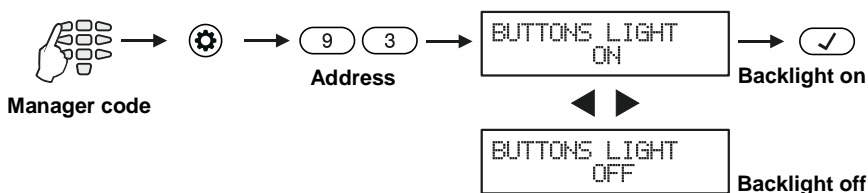

When the backlight is off, the buttons are lit only when they are pressed.

APPENDIX A - Table for Memory LOG Events

For convenience the table includes a graphic representation of the LEDs as they light up for the respective event. A black digit on a white background indicates an extinguished LED and a white digit on a black background indicates a lit up LED. Scroll from LED 1 to LED 8 to determine the correspondence between the event displayed on the keypad and the text in the table.

Example: Suppose the event displayed on the keypad is represented by a LED combination of 3, 7 and 8. The table discloses the first LED 3 data entry. The next data entries disclose that of the first LED 7. Next comes the first data entry of LED 8. This is the data entry with the ordinal number of 35 "Quick arming – Full Arming".


Event number	LED Indication	Description
1	①②③④⑤⑥⑦⑧	Burglary Alarm event
2	①②③④⑤⑥⑦⑧	Burglary Alarm event restore
3	①②③④⑤⑥⑦⑧	Fire Alarm event
4	①②③④⑤⑥⑦⑧	Fire Alarm event restore
5	①②③④⑤⑥⑦⑧	Panic Alarm event
6	①②③④⑤⑥⑦⑧	Panic Alarm event restore
7	①②③④⑤⑥⑦⑧	Tamper Alarm event
8	①②③④⑤⑥⑦⑧	Tamper Alarm event restore
9	①②③④⑤⑥⑦⑧	Medical Alarm event
10	①②③④⑤⑥⑦⑧	Medical Alarm event restore
11	①②③④⑤⑥⑦⑧	Activated zone with „24h Burglary" AUX attribute
12	①②③④⑤⑥⑦⑧	Restored zone with „24h Burglary" AUX attribute
13	①②③④⑤⑥⑦⑧	Activated zone with AUX „AC Loss" attribute
14	①②③④⑤⑥⑦⑧	Restored zone with AUX „AC Loss" attribute
15	①②③④⑤⑥⑦⑧	Activated zone with AUX „Battery Low" attribute
16	①②③④⑤⑥⑦⑧	Restored zone with AUX „Battery Low" attribute

17	①②③④⑤⑥⑦⑧	Activated zone with AUX „Water leakage" attribute
18	①②③④⑤⑥⑦⑧	Restored zone with AUX „Water leakage" attribute
19	①②③④⑤⑥⑦⑧	Activated zone with AUX „GAS Detector" attribute
20	①②③④⑤⑥⑦⑧	Restored zone with AUX „GAS Detector" attribute
21	①②③④⑤⑥⑦⑧	Activated zone with AUX „GSM Link Trouble" attribute
22	①②③④⑤⑥⑦⑧	Restored zone with AUX „GSM Link Trouble" attribute
23	①②③④⑤⑥⑦⑧	Activated zone with AUX „GAS Trouble" attribute
24	①②③④⑤⑥⑦⑧	Restored zone with AUX „GAS Trouble" attribute
25	①②③④⑤⑥⑦⑧	Activated zone with AUX „High temperature" attribute
26	①②③④⑤⑥⑦⑧	Restored zone with AUX „High temperature" attribute
27	①②③④⑤⑥⑦⑧	Activated zone with AUX „Low temp" attribute
28	①②③④⑤⑥⑦⑧	Restored zone with AUX „Low temp" attribute
29	①②③④⑤⑥⑦⑧	Activated zone with AUX „Loss of heat" attribute
30	①②③④⑤⑥⑦⑧	Restored zone with AUX „Loss of heat" attribute
31	①②③④⑤⑥⑦⑧	Activated zone with „Write to LOG" ⁽¹⁾ attribute
32	①②③④⑤⑥⑦⑧	Restored zone with "Write to LOG" ⁽¹⁾ attribute
33	①②③④⑤⑥⑦⑧	Zone Bypass
34	①②③④⑤⑥⑦⑧	Zone Bypass restore
35	①②③④⑤⑥⑦⑧	Quick arming – FULL ARM
36	①②③④⑤⑥⑦⑧	Quick arming – STAY ARM
37	①②③④⑤⑥⑦⑧	Quick arming – SLEEP ARM
38	①②③④⑤⑥⑦⑧	Arming with user code - FULL
39	①②③④⑤⑥⑦⑧	Arming with user code - STAY
40	①②③④⑤⑥⑦⑧	Arming with user code - SLEEP
41	①②③④⑤⑥⑦⑧	Disarming with user code
42	①②③④⑤⑥⑦⑧	Remote arming - FULL
43	①②③④⑤⑥⑦⑧	Remote arming - STAY
44	①②③④⑤⑥⑦⑧	Remote arming - SLEEP
45	①②③④⑤⑥⑦⑧	Remote disarming
46	①②③④⑤⑥⑦⑧	Arming with keyswitch - FULL
47	①②③④⑤⑥⑦⑧	Arming with keyswitch - STAY
48	①②③④⑤⑥⑦⑧	Arming with keyswitch - SLEEP
49	①②③④⑤⑥⑦⑧	Disarming with keyswitch
50	①②③④⑤⑥⑦⑧	FULL Arming on TimeSlot
51	①②③④⑤⑥⑦⑧	STAY Arming on TimeSlot
52	①②③④⑤⑥⑦⑧	Disarming on TimeSlot
53	①②③④⑤⑥⑦⑧	FULL Arming on “no movement”
54	①②③④⑤⑥⑦⑧	STAY Arming on “no movement”
55	①②③④⑤⑥⑦⑧	Bypass of zone with FORCE attribute when arming
56	①②③④⑤⑥⑦⑧	Debypass of zone with FORCE attribute when disarming
57	①②③④⑤⑥⑦⑧	Arm Delay on Timeslot
58	①②③④⑤⑥⑦⑧	Ambush code entered
59	①②③④⑤⑥⑦⑧	Medical panic alarm sent from keyboard
60	①②③④⑤⑥⑦⑧	Medical panic alarm from keyboard restored

61	①②③④⑤⑥⑦⑧	Police panic alarm sent from keyboard
62	①②③④⑤⑥⑦⑧	Police panic alarm from keyboard restored
63	①②③④⑤⑥⑦⑧	Fire panic alarm sent from keyboard
64	①②③④⑤⑥⑦⑧	Fire panic alarm from keyboard restored
65	①②③④⑤⑥⑦⑧	Keyboard blocking
66	①②③④⑤⑥⑦⑧	Entry in Engineer programming menu
67	①②③④⑤⑥⑦⑧	Exit from Engineer programming menu
68	①②③④⑤⑥⑦⑧	Entry in Remote programming mode
69	①②③④⑤⑥⑦⑧	Exit from Remote programming mode
70	①②③④⑤⑥⑦⑧	Periodical test
71	①②③④⑤⑥⑦⑧	Manual test
72	①②③④⑤⑥⑦⑧	No AC mains power supply
73	①②③④⑤⑥⑦⑧	Mains power supply restore
74	①②③④⑤⑥⑦⑧	Battery low charge
75	①②③④⑤⑥⑦⑧	Battery loss
76	①②③④⑤⑥⑦⑧	Battery restore
77	①②③④⑤⑥⑦⑧	Siren output short-circuit
78	①②③④⑤⑥⑦⑧	Siren line broke out
79	①②③④⑤⑥⑦⑧	Siren restored
80	①②③④⑤⑥⑦⑧	2-wire fire line fault (PGM1)
81	①②③④⑤⑥⑦⑧	2-wire fire line fault restored (PGM1)
82	①②③④⑤⑥⑦⑧	Fuse blown out
83	①②③④⑤⑥⑦⑧	Fuse restore
84	①②③④⑤⑥⑦⑧	Telephone line loss
85	①②③④⑤⑥⑦⑧	Telephone line restore
86	①②③④⑤⑥⑦⑧	System power up
87	①②③④⑤⑥⑦⑧	System reset
88	①②③④⑤⑥⑦⑧	Time change
89	①②③④⑤⑥⑦⑧	Communication error for report to monitoring station
90	①②③④⑤⑥⑦⑧	Report to monitoring station restore
91	①②③④⑤⑥⑦⑧	Periphery device loss
92	①②③④⑤⑥⑦⑧	Periphery device restore
93	①②③④⑤⑥⑦⑧	Tamper form periphery device
94	①②③④⑤⑥⑦⑧	Tamper form periphery device restore
95	①②③④⑤⑥⑦⑧	Arming on “no movement” failure
96	①②③④⑤⑥⑦⑧	User Code Changed

(1) – The events are not sent to the monitoring software.


APPENDIX B – Special Symbols for Text Entering

Use the MEMORY  button to enter some special symbols and Cyrillic letters. To enter a specialized symbol, move the cursor to the desired position, press the MEMORY button (a solid cursor appears) and then using the digit buttons enter the respective code for the symbol or letter as check in the table below.

032	048	064	080	096	112	128	144	160	176	192	208	224	240
	0	1	2	3	4	5	6	7	8	9	.	:	*
033	049	065	081	097	113	129	145	161	177	193	209	225	241
	!	1	A	Q	a	q		Г	Я	ш	.	Ц	Щ
034	050	066	082	098	114	130	146	162	178	194	210	226	242
	"	2	B	R	b	r		Е	ё	ъ	у	Ш	Щ
035	051	067	083	099	115	131	147	163	179	195	211	227	243
	#	3	C	S	c	s		Ж	В	ы	!!	а	ч
036	052	068	084	100	116	132	148	164	180	196	212	228	244
	\$	4	D	T	d	t		З	г	ь	?	ф	Н
037	053	069	085	101	117	133	149	165	181	197	213	229	245
	%	5	E	U	e	u		И	е	о	х	ц	?
038	054	070	086	102	118	134	150	166	182	198	214	230	246
	&	6	F	V	f	v		Й	к	к	?	ш	?
039	055	071	087	103	119	135	151	167	183	199	215	231	247
	'	7	G	U	g	u		Л	з	я	I	'	Е
040	056	072	088	104	120	136	152	168	184	200	216	232	248
	(8	H	X	h	x		П	и	о	и	"	†
041	057	073	089	105	121	137	153	169	185	201	217	233	249
)	9	I	Y	i	y		У	а	о	†	^	?
042	058	074	090	106	122	138	154	170	186	202	218	234	250
	*	:	J	Z	j	z		Ф	к	а	↓	е	†
043	059	075	091	107	123	139	155	171	187	203	219	235	251
	+	:	K	[k]		Ч	л	"	Н	С	†
044	060	076	092	108	124	140	156	172	188	204	220	236	252
	,	<	L	*	1	2		Ш	М	Н	М	У	Х
045	061	077	093	109	125	141	157	173	189	205	221	237	253
	-	=	M	I	n	5		б	М	с	М	А	С
046	062	078	094	110	126	142	158	174	190	206	222	238	254
	.	>	N	^	n	4		М	н	с	?	о	Н
047	063	079	095	111	127	143	159	175	191	207	223	239	255
	/	?	O	_	o	€		Э	т	е	.	о	■


Example:

To enter the “asterisk” symbol, first press the MEMORY button (a solid cursor appears on the place) and after that enter code 042. The asterisk symbol will appear and the cursor will move one position to the right.

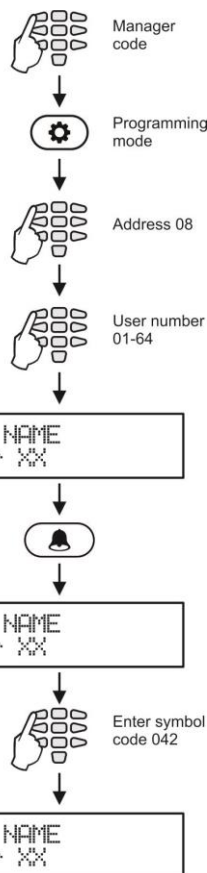

APPENDIX C – VD/ DTMF Operation Algorithm

The user can realize remote management of the system if the system configuration is equipped with voice module. *If during 40 seconds time interval there is no action – pressed button, the system will break up the line.*

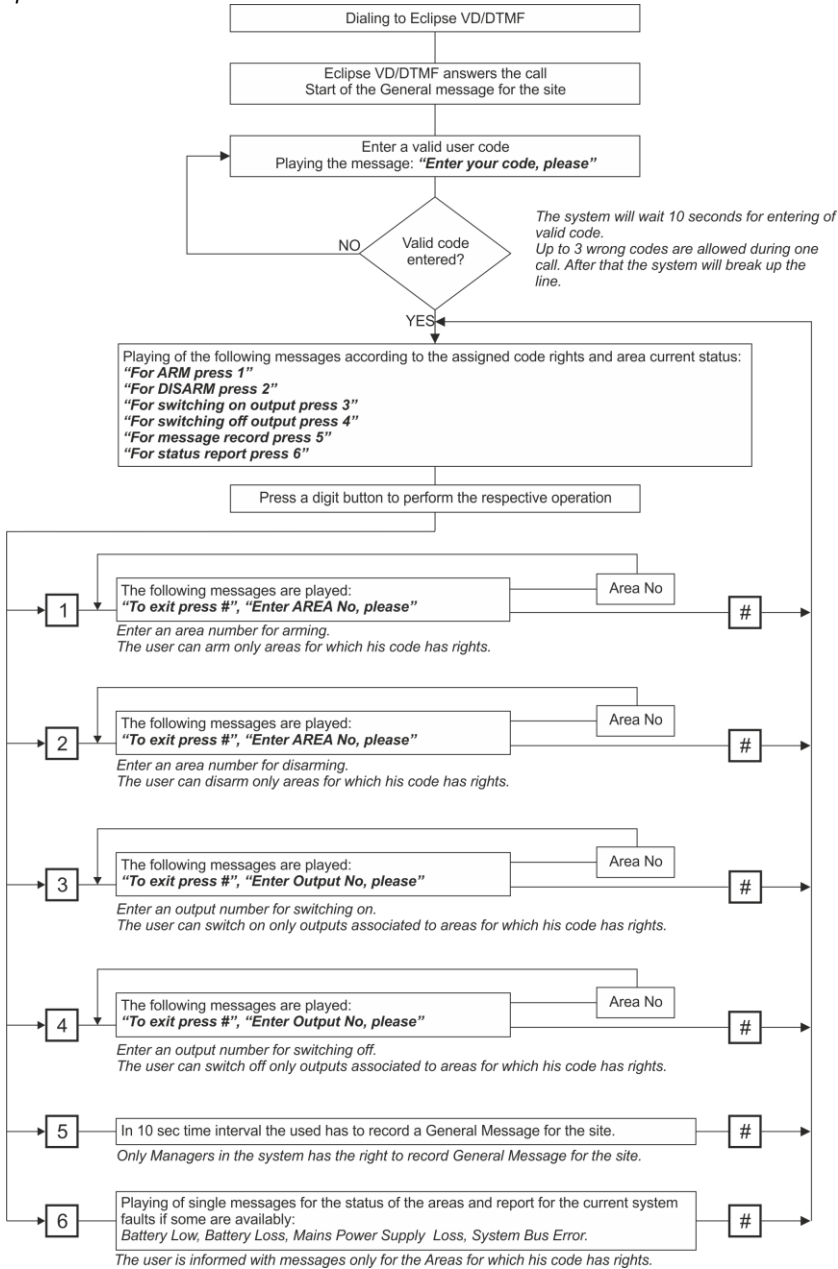

System Check List – Fill in from the Installer

Zones Description

Zone	Type	Zone	Type	Zone	Type
1		12		23	
2		13		24	
3		14		25	
4		15		26	
5		16		27	
6		17		28	
7		18		29	
8		19		30	
9		20		31	
10		21		32	
11		22			

PGMs Description

PGM 1		PGM 3		PGM 5	
PGM 2		PGM 4			

System Timers

Entry time, (sec.)	
Exit time, (sec.)	
The siren will be activated, (min.)	

Arming Modes for Stand-alone Proxy Reader

Mode	Areas							
	A1	A2	A3	A4	A5	A6	A7	A8
Full Arming								
Mode A								
Mode B								

F – Full Arming; **s** – Stay Arming; **S** – Sleep Arming; **D** – Disarming;

“*” – No arming mode is set

Installer:

Service:

Tel./Fax:



www.teletek-electronics.com

Address: Bulgaria, Sofia - 1407, 14A Srebarna Str.
Tel.: +359 2 9694 800, Fax: +359 2 962 52 13
e-mail: info@teletek-electronics.bg